

Westland

OVER THE TOWER BIMINI ASSEMBLY INSTRUCTIONS
WITH STAINLESS STEEL HARDWARE


MONSTER - MT1 TOWER

PART# MT MT1 NN1-3BS0AA / 3BS0AH



PACKAGE CONTENTS

BOW PIECES

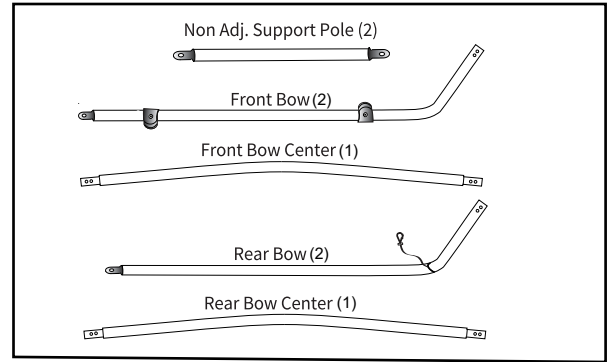

HARDWARE


#8 5/8" Screw
(8) #100340

TOOLS REQUIRED

*Phillips and Flat Head Screwdrivers


STEP ONE :

Assemble your Front & Rear Bow pieces by inserting the screws as shown below.

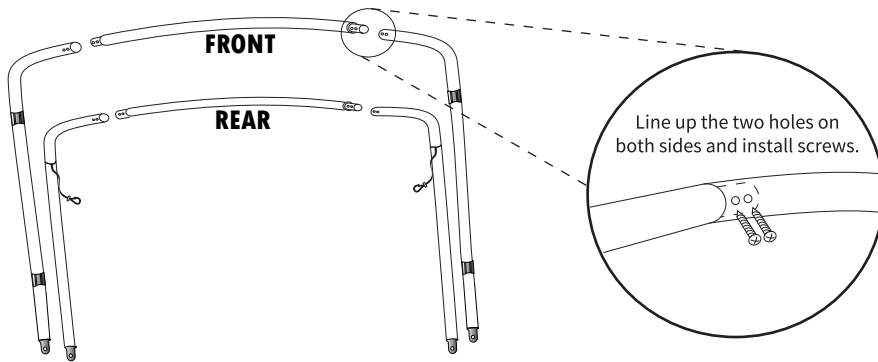


STEP TWO :

Lay bimini fabric face down on a flat clean surface. (Label will be sewn into the rear sleeve)

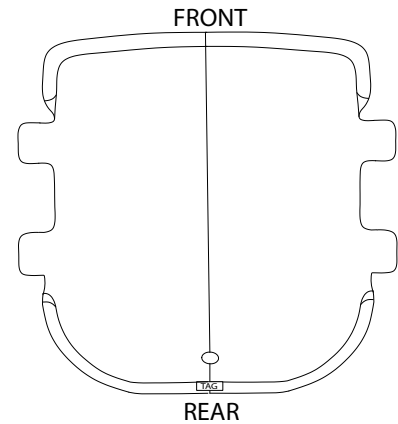


STEP THREE :

Position the Front Bow with the top jaw slide opening face up. Thread the bow through the front sleeve.

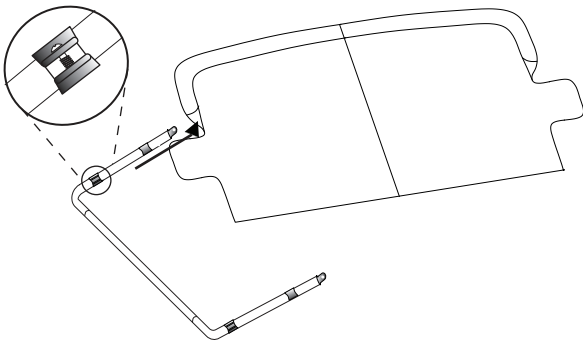


STEP FOUR :

Position the Rear Bow so that the strap is facing upwards and the rivet head is facing down towards the canvas. Thread the bow through the sleeve.

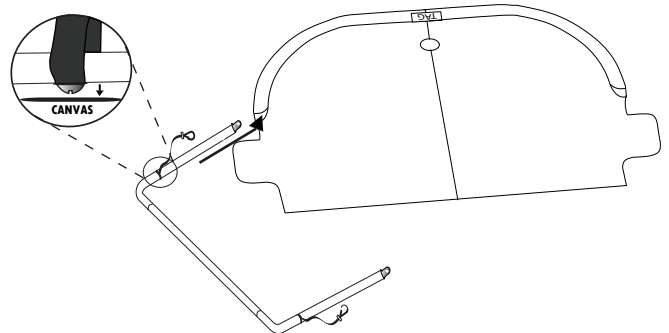

STEP FIVE :

Attach the 8" leg extension to the top jaw side. Your Bimini is now fully assembled and is ready to install onto your Monster Tower®.

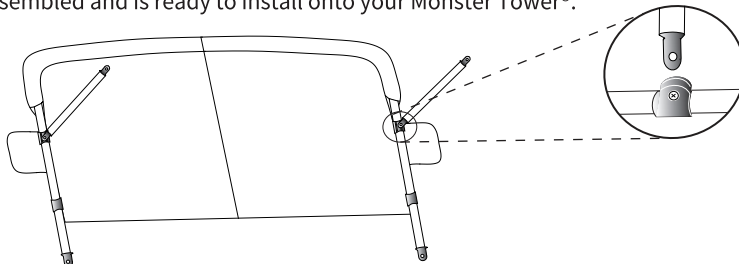



WESTLAND


OVER TOWER BIMINI TOP - BREAKDOWN VERSION MOUNTING INSTRUCTIONS

westlandcovers.com
phone# 800-835-7992

TOWERS BASES MEASURING - 72" OR MORE

2022 MONSTER TOWER	MONSTER MT 1	MT MT1 NN1-3BS0AA MT MT1 NN1-3BS0AH
--------------------	--------------	--

PLEASE READ DIRECTIONS CAREFULLY BEFORE DRILLING TOWER

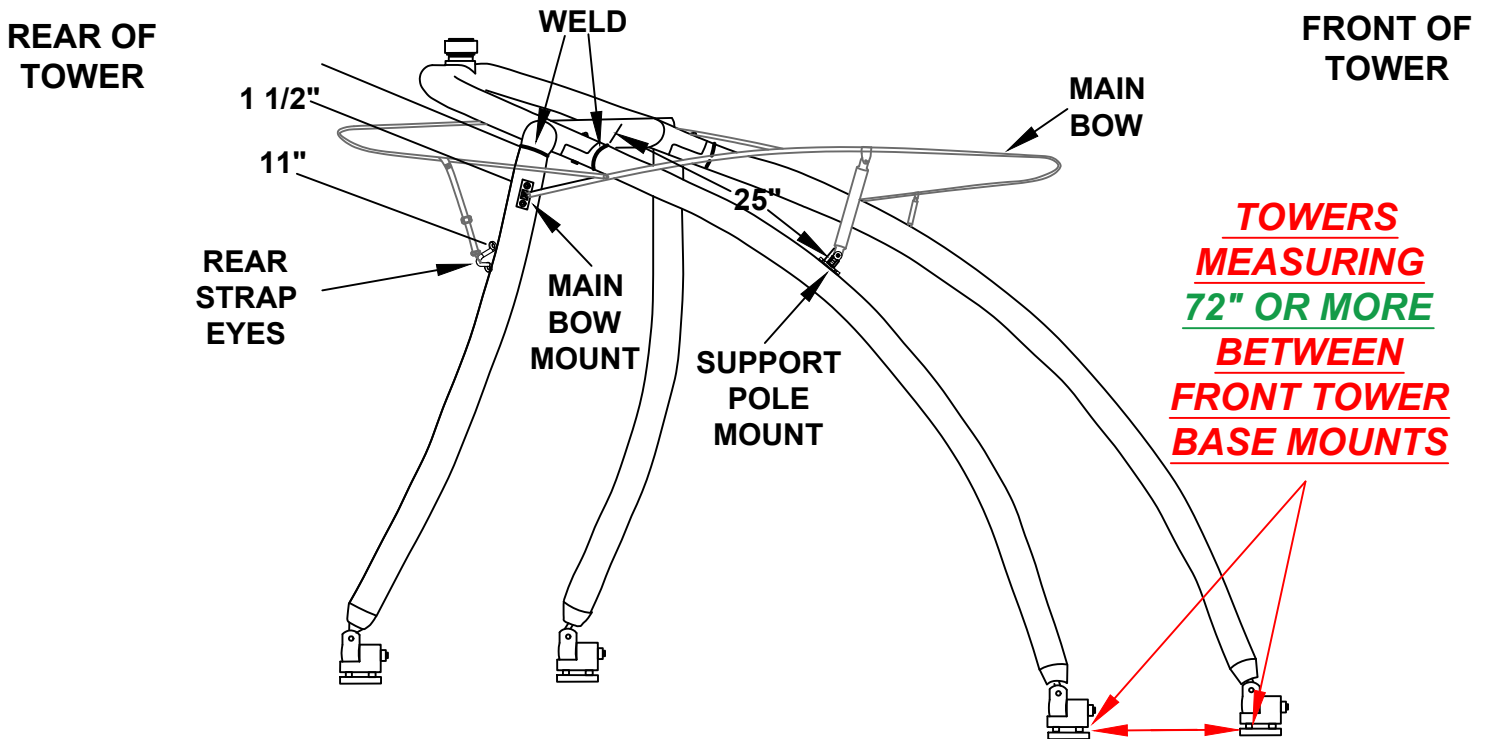

**TOWERS
MEASURING
72" OR MORE
BETWEEN
FRONT TOWER
BASE MOUNTS**

- 1) MEASURE 25" DOWN FROM CENTER OF WELD, ON FRONT LEG OF TOWER, TO CENTER OF TOP HOLE IN 180 DEGREE SWIVEL **SUPPORT POLE MOUNT**. CENTER MOUNT ON FRONT OF TOWER LEG, TWISTKNOB TOWARD INSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS.
- 2) MEASURE 1 1/2" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE ON **MAIN BOW SIDE MOUNT**. CENTER MOUNT ON OUTSIDE OF TOWER LEG. PLACE TWISTKNOB IN MOUNT TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS
- 3) MEASURE 11" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE IN **STRAP EYE**. CENTER STRAP EYE ON BACKSIDE OF TOWER LEG. USE #8 X 3/4" TEK SCREWS.

HARDWARE PACKAGED

- 2 - 200880 MOUNT SIDE S/S W/BOLT
- 2 - 200831 DECK HINGE 180 SS
- 4 - 101180 BLACK TWISTKNOBS 1/4" - 20 X 1"
- 2 - 101060 STRAP EYES
- 8 - 100470 #10 X 3/4" PHIL FLAT TEK SCREW
- 4 - 100390 #8 X 3/4" PHIL FLAT TEK SCREWS

ASSEMBLY PACKAGED

- 8 - 100340 #8 X 5/8" SCREW



WESTLAND


OVER TOWER BIMINI TOP - BREAKDOWN VERSION MOUNTING INSTRUCTIONS

westlandcovers.com
phone# 800-835-7992

TOWERS BASES MEASURING - 72" OR LESS

2022 MONSTER TOWER	MONSTER MT 1	MT MT1 NN1-3BS0AA MT MT1 NN1-3BS0AH
--------------------	--------------	--

PLEASE READ DIRECTIONS CAREFULLY BEFORE DRILLING TOWER

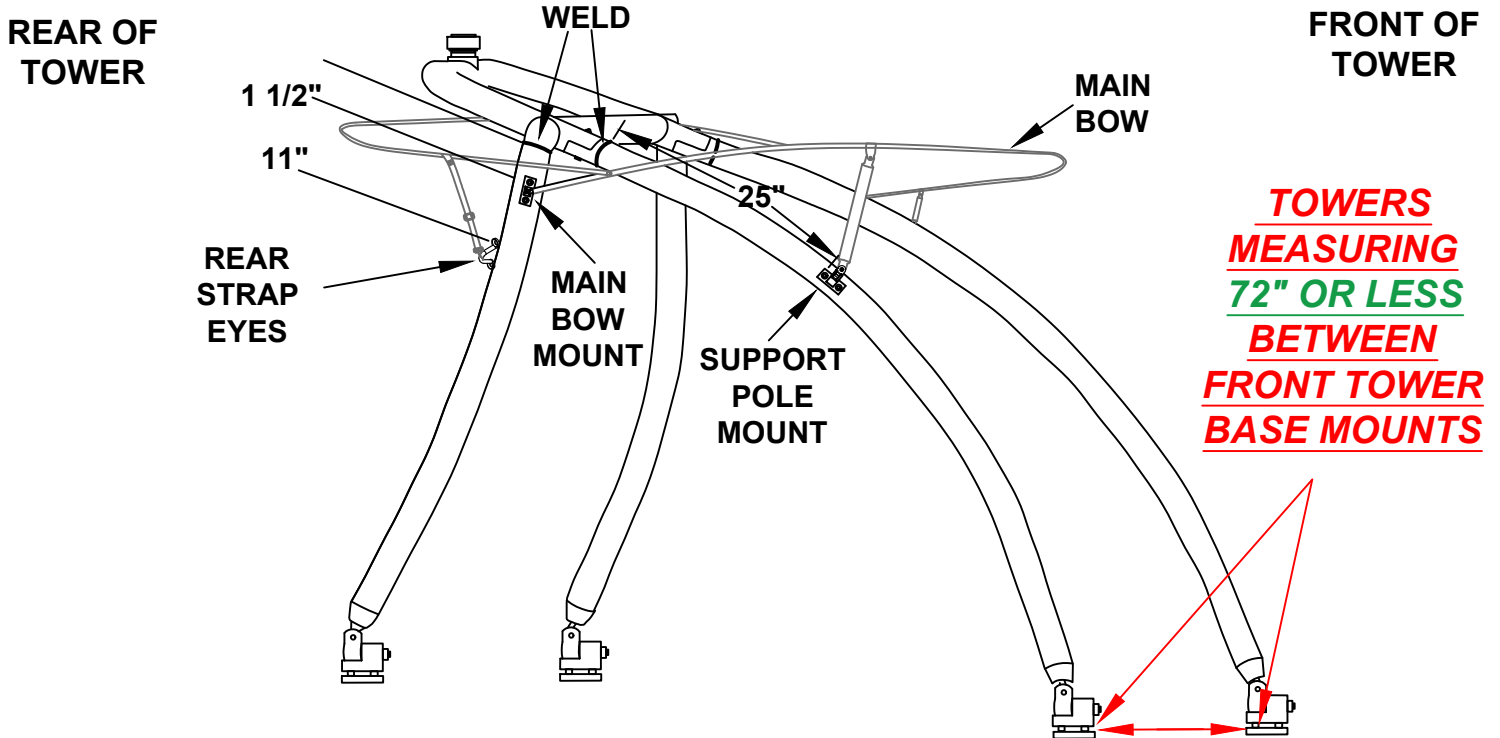

**TOWERS
MEASURING
72" OR LESS
BETWEEN
FRONT TOWER
BASE MOUNTS**

- 1) MEASURE 25" DOWN FROM CENTER OF WELD, ON FRONT LEG OF TOWER, TO CENTER OF TOP HOLE IN 180 DEGREE SWIVEL **SUPPORT POLE MOUNT**. CENTER MOUNT ON OUTSIDE OF TOWER LEG, TWISTKNOB TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS.
- 2) MEASURE 1 1/2" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE ON **MAIN BOW SIDE MOUNT**. CENTER MOUNT ON OUTSIDE OF TOWER LEG. PLACE TWISTKNOB IN MOUNT TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS
- 3) MEASURE 11" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE IN **STRAP EYE**. CENTER STRAP EYE ON BACKSIDE OF TOWER LEG. USE #8 X 3/4" TEK SCREWS.

HARDWARE PACKAGED

- 2 - 200880 MOUNT SIDE S/S W/BOLT
- 2 - 200831 DECK HINGE 180 SS
- 4 - 101080 BLACK TWISTKNOBS 1/4" - 20 X 1"
- 2 - 101060 STRAP EYES
- 8 - 100470 #10 X 3/4" PHIL FLAT TEK SCREW
- 4 - 100390 #8 X 3/4" PHIL FLAT TEK SCREWS

ASSEMBLY PACKAGED

- 8 - 100340 #8 X 5/8" SCREW